


A4007T & A4007TS Turntables Installation and Operation Instructions

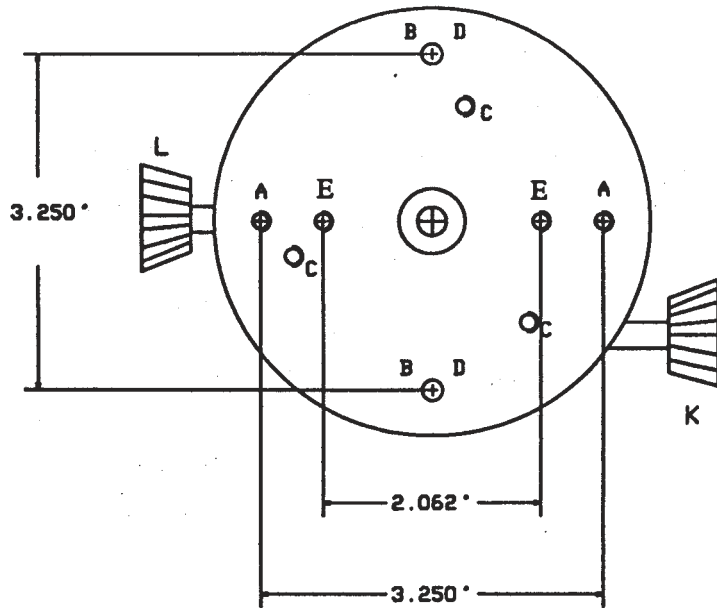

1. Loosen the clamping knob, L.
2. Rotate the top disc of the turntable to line up the access holes D with the securing holes B of the bottom disc.
3. Two #10 cap head screws can now be inserted to secure the bottom disc to your base plate.

Operating Instructions

1. Clamp the turntable in the region desired with the locking knob L.
2. Fine adjust the table with knob K.

A = 10-32 NF-2 thread.

B = Clearance for 10-32 cap head screw

C = 10-32 set screws for internal leveling

D = Access holes to B hole

E = 8-32NF-2Thread