


XZ Adapter Plates

XZ Adapter Plates and Brackets allow UniSlide Assemblies to be positioned vertically or end mounted, facing any one of four directions, all of which are perpendicular to the X or Y planes.

Look at Combining UniSlides, page 1.57, now for examples. The XZ Plate Adapter end-mounts the UniSlide using the two holes in the nameplate end of the base. It is for light loads and short slides, while


the bracket designs (page 1.49) are more rigid to handle heavier loads.

At the end of this section is the A6000TX adapter for A4800 Rotary tables.

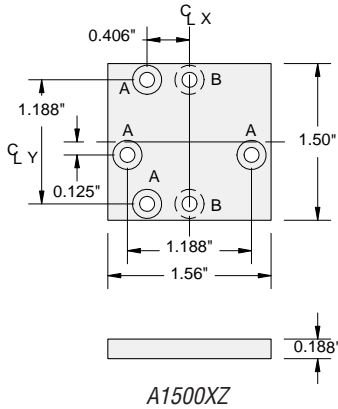

A= (4) C'BORE FOR 6-32 PNHD SCREW. FOR MOUNTING A15 SERIES UNISLIDE VERTICALLY

B= (2) C'BORE FOR 6-32 PNHD SCREW. FOR MOUNTING PLATE TO A15 SERIES UNISLIDE (OPPOSITE SIDE)

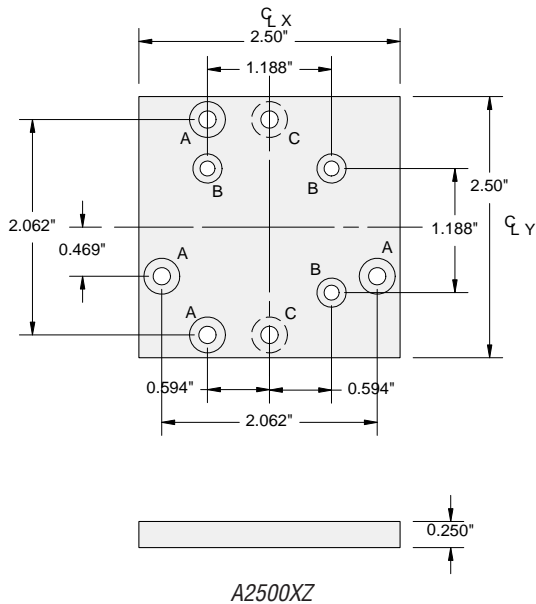


A= (4) C'BORE FOR 8-32 PNHD SCREW. FOR MOUNTING A25 SERIES UNISLIDE VERTICALLY

B= (3) C'BORE FOR 6-32 PANHEAD. FOR MOUNTING A15 SERIES UNISLIDE VERTICALLY

C= (2) C'BORE FOR 8-32 PNHD SCREW. FOR MOUNTING PLATE TO 25 SERIES UNISLIDE (OPPOSITE SIDE)

XZ Adapter Plates for A40 and A60 Series

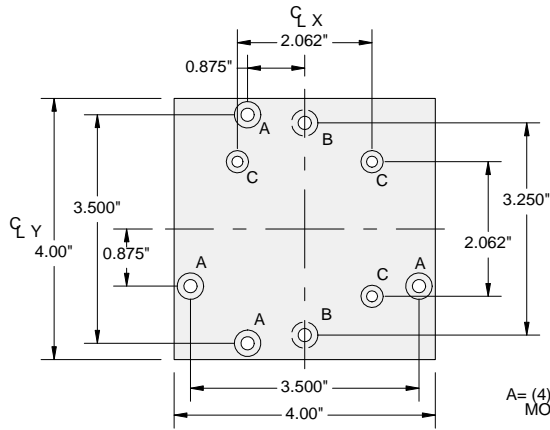


A= (4) C'BORE FOR 10-32 PNHD SCREW, FOR MOUNTING A40 SERIES UNISLIDE VERTICALLY

B= (2) C'BORE FOR 10-32 PNHD SCREW, FOR MOUNTING PLATE TO 40 SERIES UNISLIDE (OPPOSITE SIDE)

C= (3) C'BORE FOR 8-32 PNHD SCREW, FOR MOUNTING A25 SERIES UNISLIDE VERTICALLY

A4000XZ

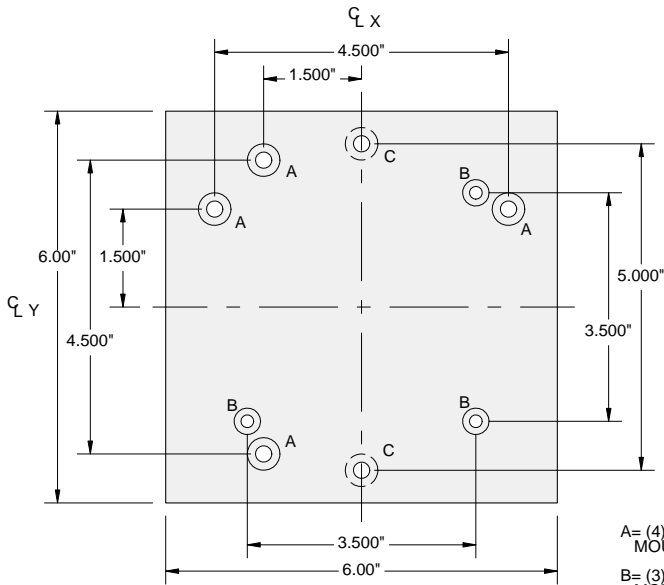


A= (4) C'BORE FOR 1/4-20 PNHD SCREW, FOR MOUNTING A60 SERIES UNISLIDE VERTICALLY

B= (3) C'BORE FOR 10-32 PANHEAD, FOR MOUNTING A40 SERIES UNISLIDE VERTICALLY

C= (2) C'BORE FOR 1/4-20 PNHD SCREW, FOR MOUNTING PLATE TO 60 SERIES UNISLIDE (OPPOSITE SIDE)

A6000XZ

XZ Adapter Plate for B90 Series

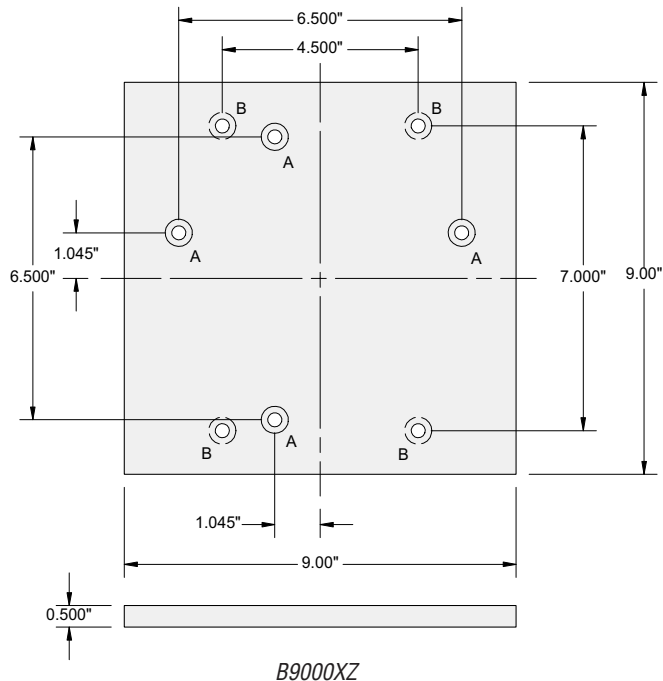

A= (4) C'SINK FOR 5/16-18 FLHD SCREW. FOR MOUNTING B90 SERIES UNISLIDE VERTICALLY

B= (4) C'SINK FOR 5/16-18 FLHD SCREW FOR MOUNTING PLATE TO B90 SERIES UNISLIDE (OPPOSITE SIDE)

Adapter Plate A6000TX for A4800 Series Rotary Table

- A: (2) C'SINK FOR 1/4" FLHD SCREW. FOR MOUNTING A60 SERIES UNISLIDE
- B: (2) C'SINK FOR #10 FLHD SCREW. FOR MOUNTING TO A40 SERIES UNISLIDE
- C: (6) TAP 10-32 ON A 4" BOLT CIRCLE. FOR MOUNTING 4800 SERIES ROTARY TABLE

